



1.1 MAIN BODY ASSEMBLY

Model : UB-302

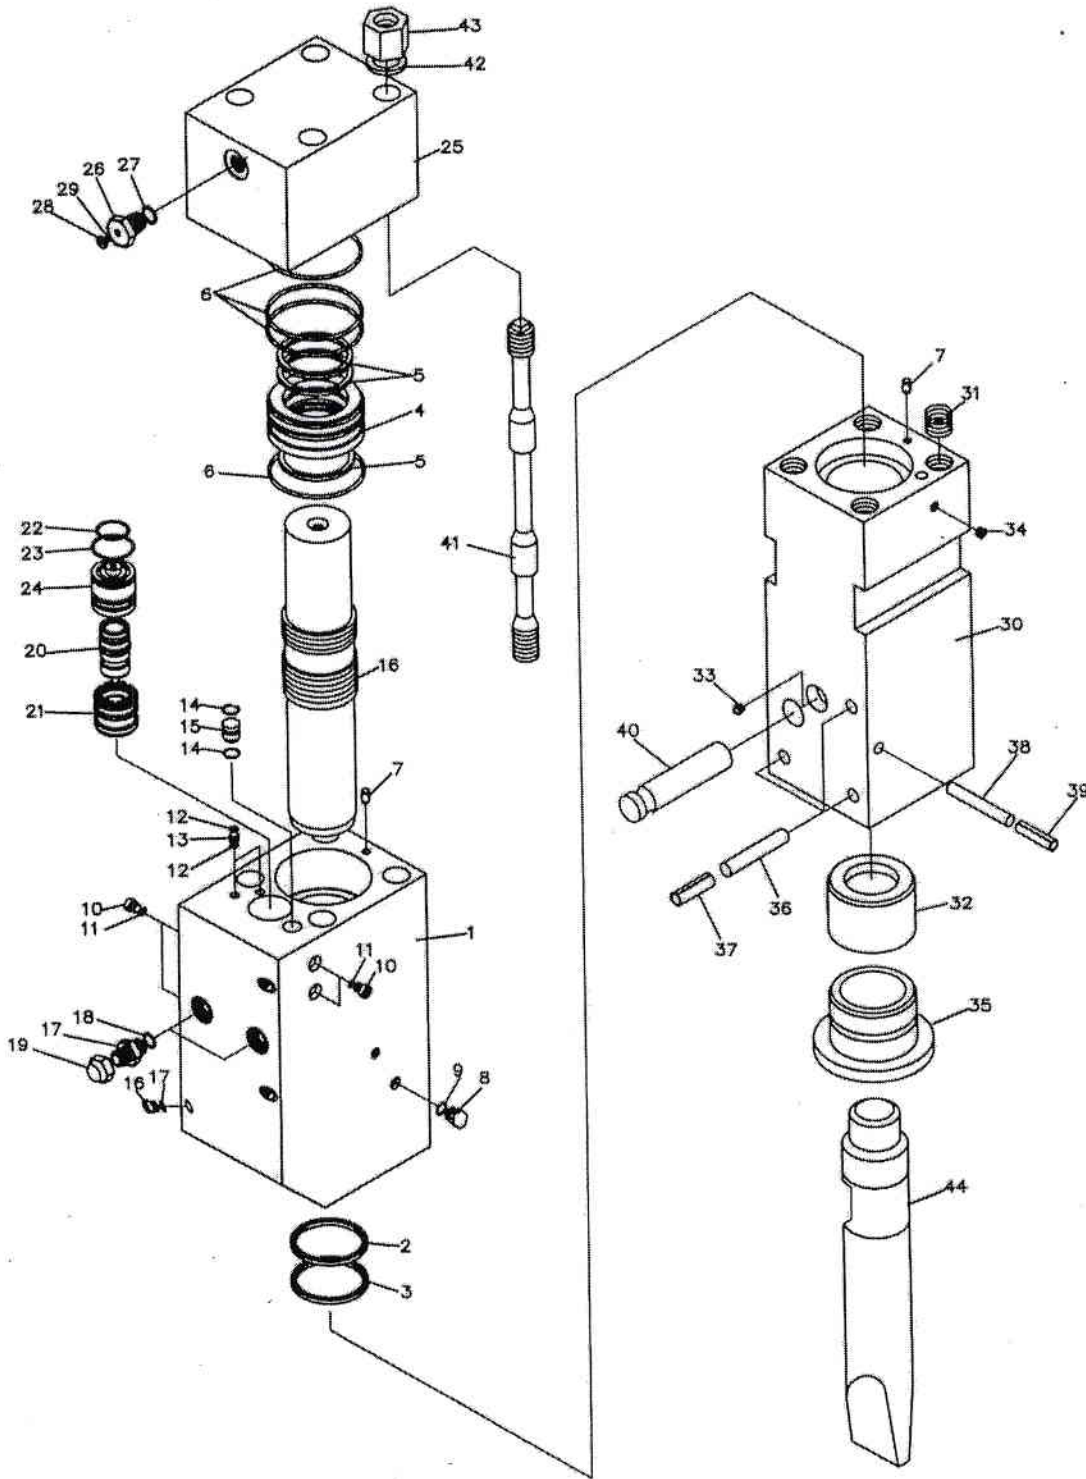

NO	Part No.	Part name	Q'ty	Remarks
	302CY0100	Cylinder ass'y	1	
1	302CY0101	Cylinder	1	
2	302CY0102	U-packing	1	ISI 55 * 65 * 6
3	302CY0103	Dust seal	1	DSI 55 * 63 * 5 * 6.5
4	302CY0104	Seal retainer	1	
5	302CY0105	U-packing	3	ISI 53 * 63 * 6
6	302CY0106	O-ring	4	1BG 75
7	302CY0107	Knock pin	2	
8	302CY0108	Air plug	1	
9	302CY0109	O-ring	1	1BP 14
10	302CY0110	1/4"Socket plug	7	
11	302CY0111	O-ring	7	1BP 11
12	302CY0112	O-ring	4	1BP 6
13	302CY0113	Teflon plug	2	φ 9 * 12.7
14	302CY0114	O-ring	2	1BP 16
15	302CY0115	Teflon plug	1	φ 20 * 15
16	302CY0116	Piston	1	
17	302CY0117	Adapter	2	
18	302CY0118	O-ring	2	1BP 18
19	302CY0119	Union cap	2	
45	302CY0120	Cylinder adjust	1	
46	302CY0121	Adjuster nut	1	
47	302CY0122	O-ring	1	
	302VV0200	Valve ass'y	1	
20	302VV0201	Valve	1	
21	302VV0202	Sleeve	1	
22	302VV0203	O-ring	1	1BG 30
23	302VV0204	O-ring	1	1BP 36
24	302VV0205	Valve cover	1	
	302BH0300	Back head ass'y	1	
25	302BH0301	Back head	1	
26	302BH0302	B/H charging valve	1	
27	302BH0303	O-ring	1	1BP 18
28	302BH0304	Charging valve cap	1	
29	302BH0305	O-ring	1	1BP 6

2.1 BOX TYPE BRACKET

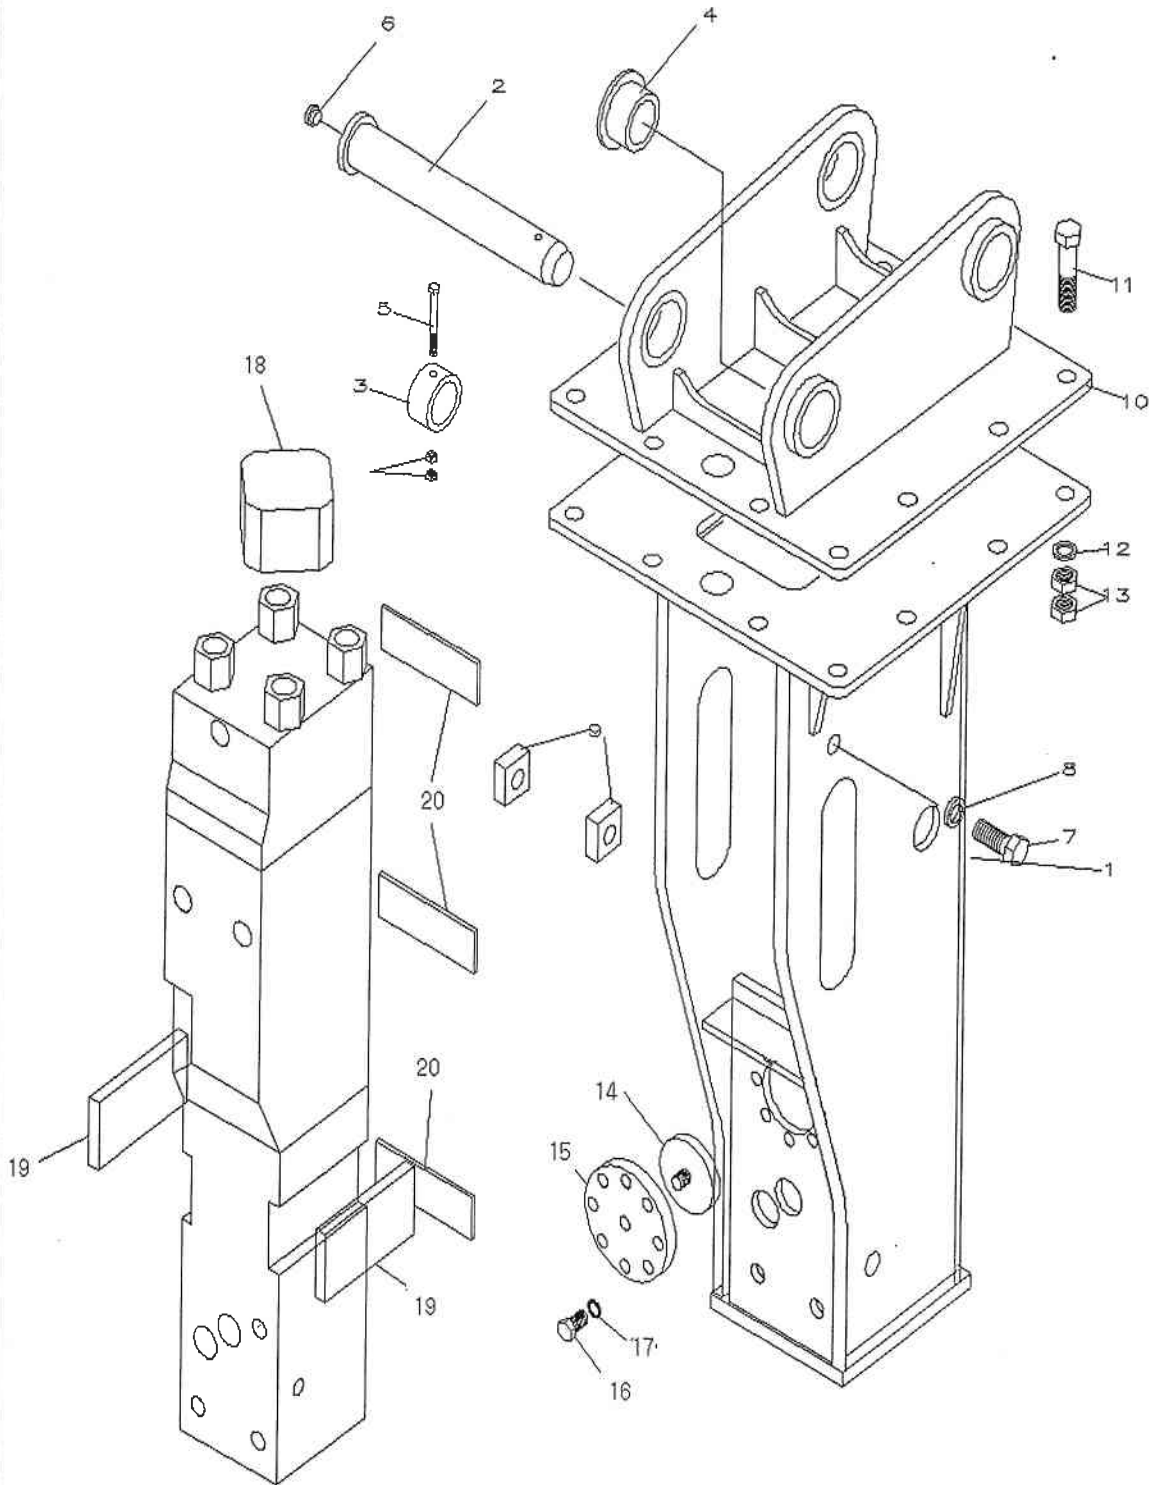

No.	Part No.	Part Name	Q'ty	Remarks
	302BB0000	Bracket assy	1	
1	302BB0001	Bracket, main	1	
2	302BB0002	Bracket, pin	2	
3	302BB0003	Bracket stop ring	2	
4	302BB0004	Bracket bush	4	
5	302BB0005	Stopping bolt	2	
6	302BB0006	Grease nipple	2	
7	302BB0007	Spacer bolt	2	M20 * P2.5 * L30
8	302BB0008	Spring washer	2	5.1t
9	302BB0009	Spacer	2	
10	302BB0010	Mounting cap	1	
11	302BB0011	Mounting cap bolt	12	M20 * P2 * L70
12	302BB0012	Spring washer	12	5.1t
13	302BB0013	Mounting cap nut	24	M20 * P2 * 16t
14	302BB0014	Damper	1	
15	302BB0015	Damper cover	1	
16	302BB0016	Damper cover bolt	8	M12 * P1.75 * L30
17	302BB0017	Spring washer	8	3t
18	302BB0018	Top damper	1	
19	302BB0019	Setup damper	2	
20	302BB0020	Rear damper	3	
21	302BB0021	Stopping nut	4	
	302SL0000	Seal kit	1	
	302TL0000	Tool set	1	
	GC0000	GAS CHARGING KIT	1	
	GS00002	Sticker 2 (GREESE)	1	