


# 1.1 MAIN BODY ASSEMBLY


Model : UB-304

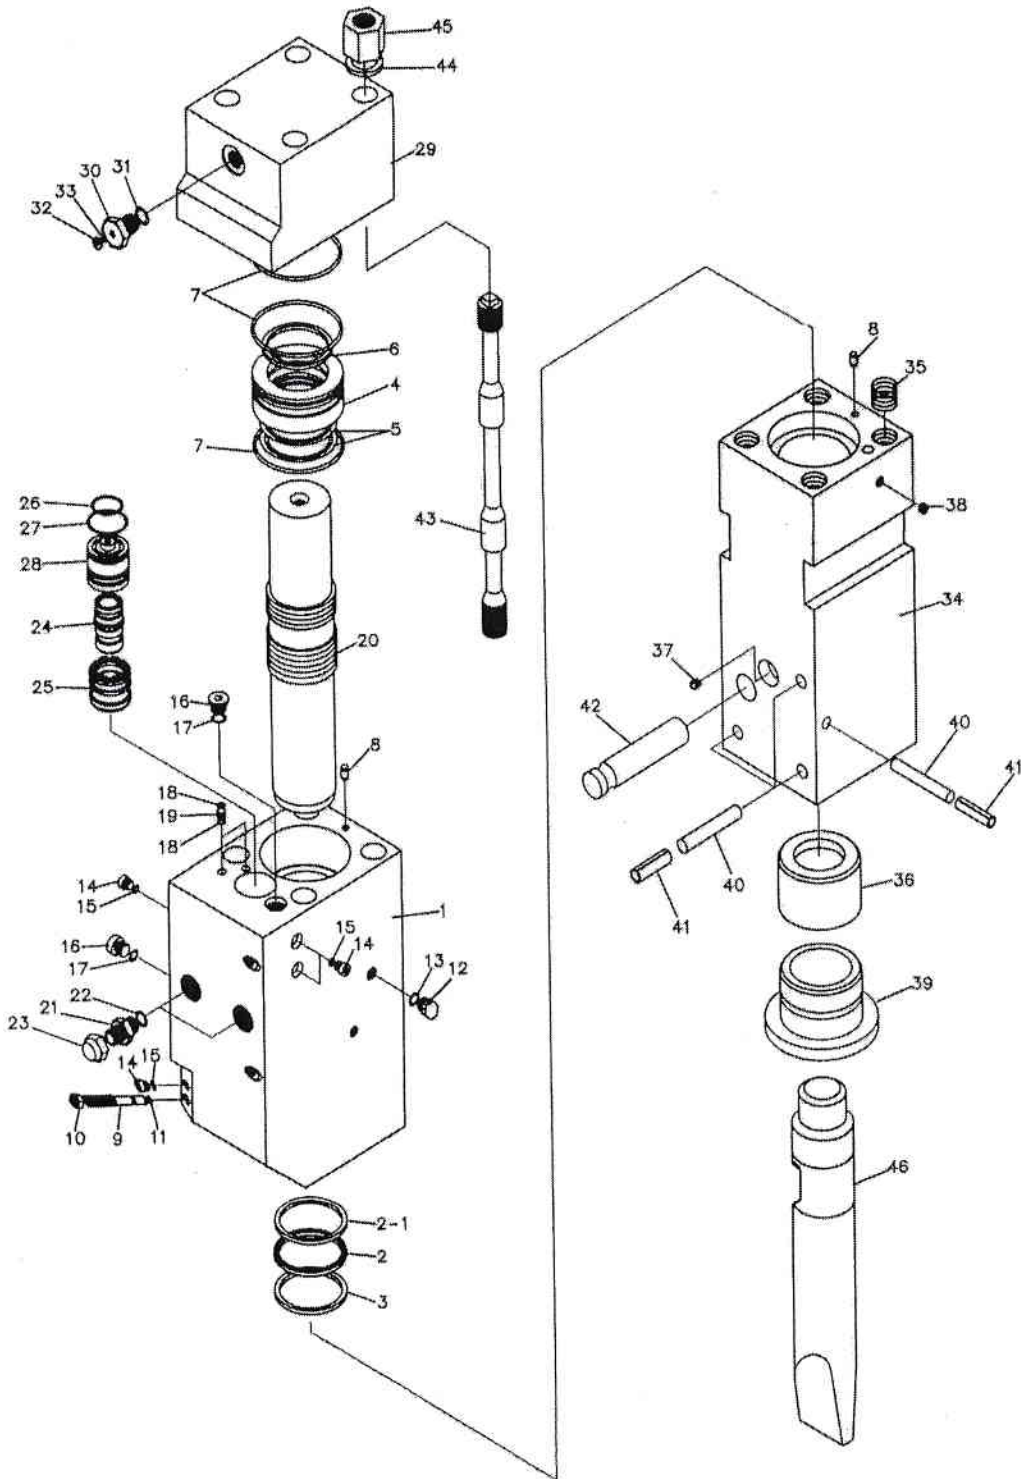

NO	Part No.	Part name	Q'ty	Remarks
	304CY0100	Cylinder ass'y	1	
1	304CY0101	Cylinder	1	
2	304CY0102	U-packing	1	ISI 75 * 85 * 6
2-1	304CY0124	Buffer ring	1	
3	304CY0103	Dust seal	1	DSI 75 * 85 * 6 * 8
4	304CY0104	Seal retainer	1	
5	304CY0105	Slide-packing	2	HBT 73 88.5 * 5.9
6	304CY0106	Seal-ring	1	Q 73
7	304CY0107	O-ring	3	1BG 100
8	304CY0108	Knock pin	2	
9	304CY0109	Cylinder adjuster	1	
10	304CY0110	Adjuster nut	1	
11	304CY0111	O-ring	5	1BP 6
12	304CY0112	Air plug	1	
13	304CY0113	O-ring	1	1BP 14
14	304CY0114	1/4" Socket plug	6	
15	304CY0115	O-ring	6	1BP 11
16	304CY0116	M24 Socket plug	2	
17	304CY0117	O-ring	2	1BP 22
18	304CY0118	O-ring	2	1BP 6
19	304CY0119	Teflon plug	2	φ 9 * 12.7
20	304CY0120	Piston	1	
21	304CY0121	Adapter	2	
22	304CY0122	O-ring	2	1BP 18
23	304CY0123	Union cap	1	
	304VV0200	Valve ass'y	1	
24	304VV0201	Valve	1	
25	304VV0202	Sleeve	1	
26	304VV0203	O-ring	1	1BG 35
27	304VV0204	O-ring	1	1BG 50
28	304VV0205	Valve cover	1	
	304VV0206	Back head ass'y	1	
29	304VV0207	Back head	1	
30	304VV0208	B/H charging valve	1	

NO	Part No.	Part name	Q'ty	Remarks
31	304BH0303	O-ring	1	1BP 18
32	304BH0304	Charging valve cap	1	
33	304BH0305	O-ring	1	1BP 6
	304FH0400	Front head ass'y	1	
34	304FH0401	Front head	1	
35	304FH0402	M30 Heli-coil	4	M30*P2.0*1D
36	304FH0403	Thrust bush	1	
37	304FH0404	Grease nipple	1	
38	304FH0405	Hollow plug	1	
39	304FH0406	Front cover	1	
40	304FH0407	Stop pin	4	φ 16 * L108
41	304FH0408	Spring pin	4	
42	304FH0409	Rod pin	1	
	304TB0500	Through bolt ass'y	4	
43	304TB0501	Through bolt	4	
44	304TB0502	Through bolt washer	4	
45	304TB0503	Hexagonal nut	4	
46	304RR0600	Rod (w)	1	
	304RR0601	Rod (F)		
	304RR0602	Rod (M)		
	304RR0603	Rod (C)		
			1	
			1	
			1	
			1	
			1	
			1	
			1	

## 2.1 BOX TYPE BRACKET

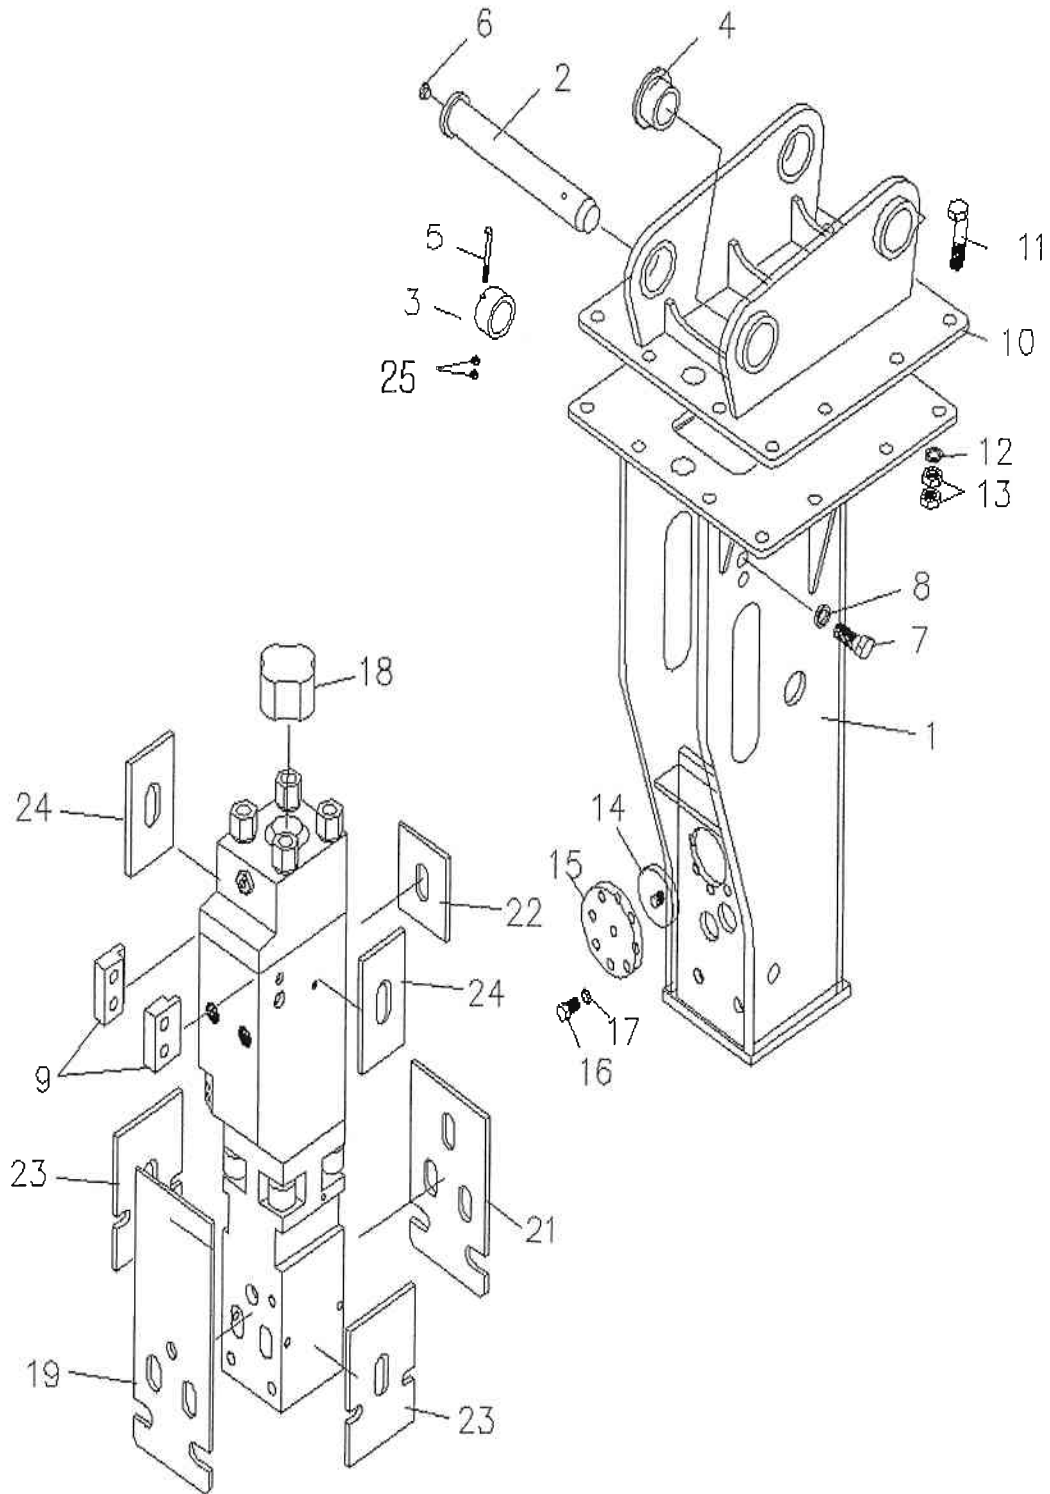

No.	Part No.	Part Name	Q'ty	Remarks
	304BB0000	Bracket assy	1	
1	304BB0001	Bracket, main	1	
2	304BB0002	Bracket, pin	2	
3	304BB0003	Bracket stop ring	2	
4	304BB0004	Bracket bush	4	
5	304BB0005	Stopping bolt	2	
6	304BB0006	Grease nipple	2	
7	304BB0007	Spacer bolt	4	M20 * P2.5 * L40
8	304BB0008	Spring washer	4	5.1t
9	304BB0009	Spacer	2	
10	304BB0010	Mounting cap	1	
11	304BB0011	Mounting cap bolt	12	M20 * P2 * L70
12	304BB0012	Spring washer	12	5.1t
13	304BB0013	Mounting cap nut	24	M20 * P2 * 16t
14	304BB0014	Damper	1	
15	304BB0015	Damper cover	1	
16	304BB0016	Damper cover bolt	8	M12 * P1.75 * L30
17	304BB0017	Spring washer	8	3t
18	304BB0018	Top damper	1	
19	304BB0019	Front damper	1	
21	304BB0021	Rear damper(1)	1	
22	304BB0022	Rear damper(2)	1	
23	304BB0023	Side damper(1)	1	
24	304BB0024	Side damper(2)	1	
25	304BB0025	Stopping nut	4	
	304SL0000	Seal kit	1	
	304TL0000	Tool set	1	
	GC00000	GAS CHARGING KIT	1	
	GS00002	Sticker 2 (GREESE)	1	