



URC132RR MAIN BODY ASSEMBLE

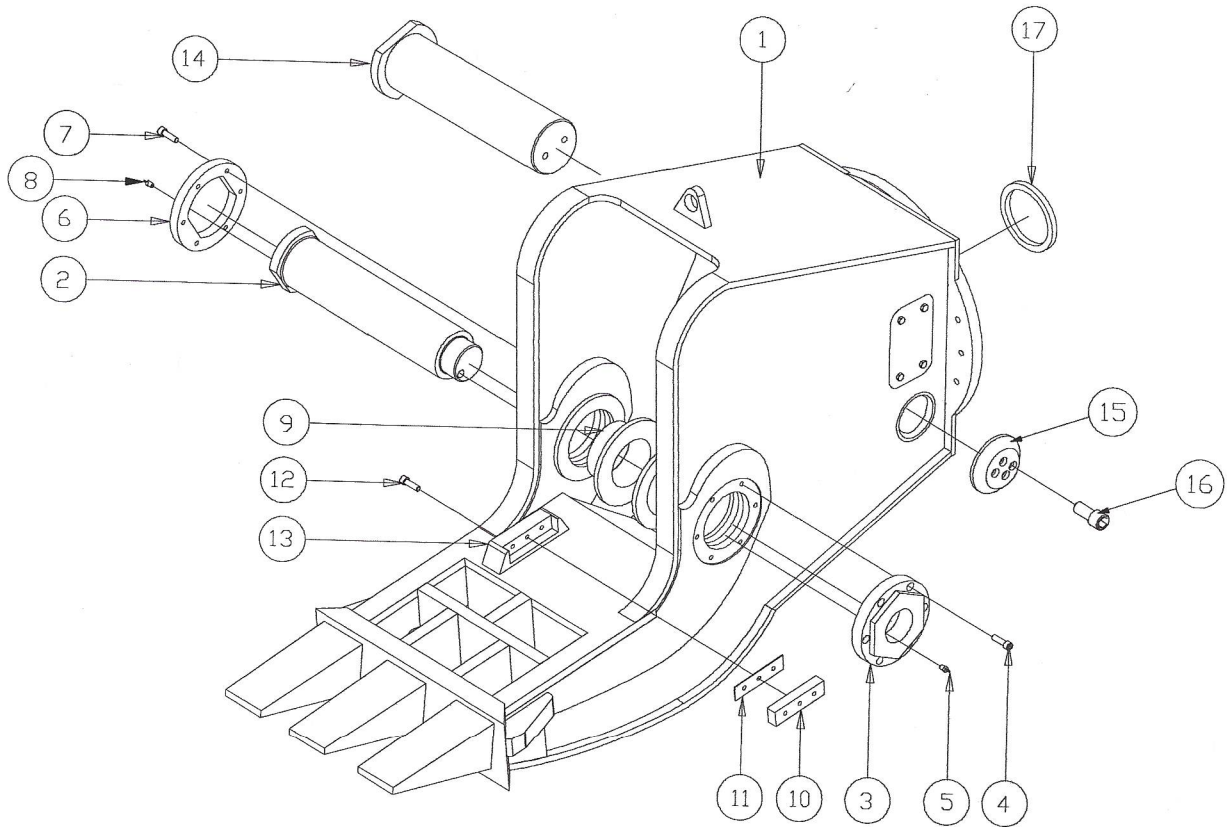

URC132RR ROTATOR ASSEMBLY


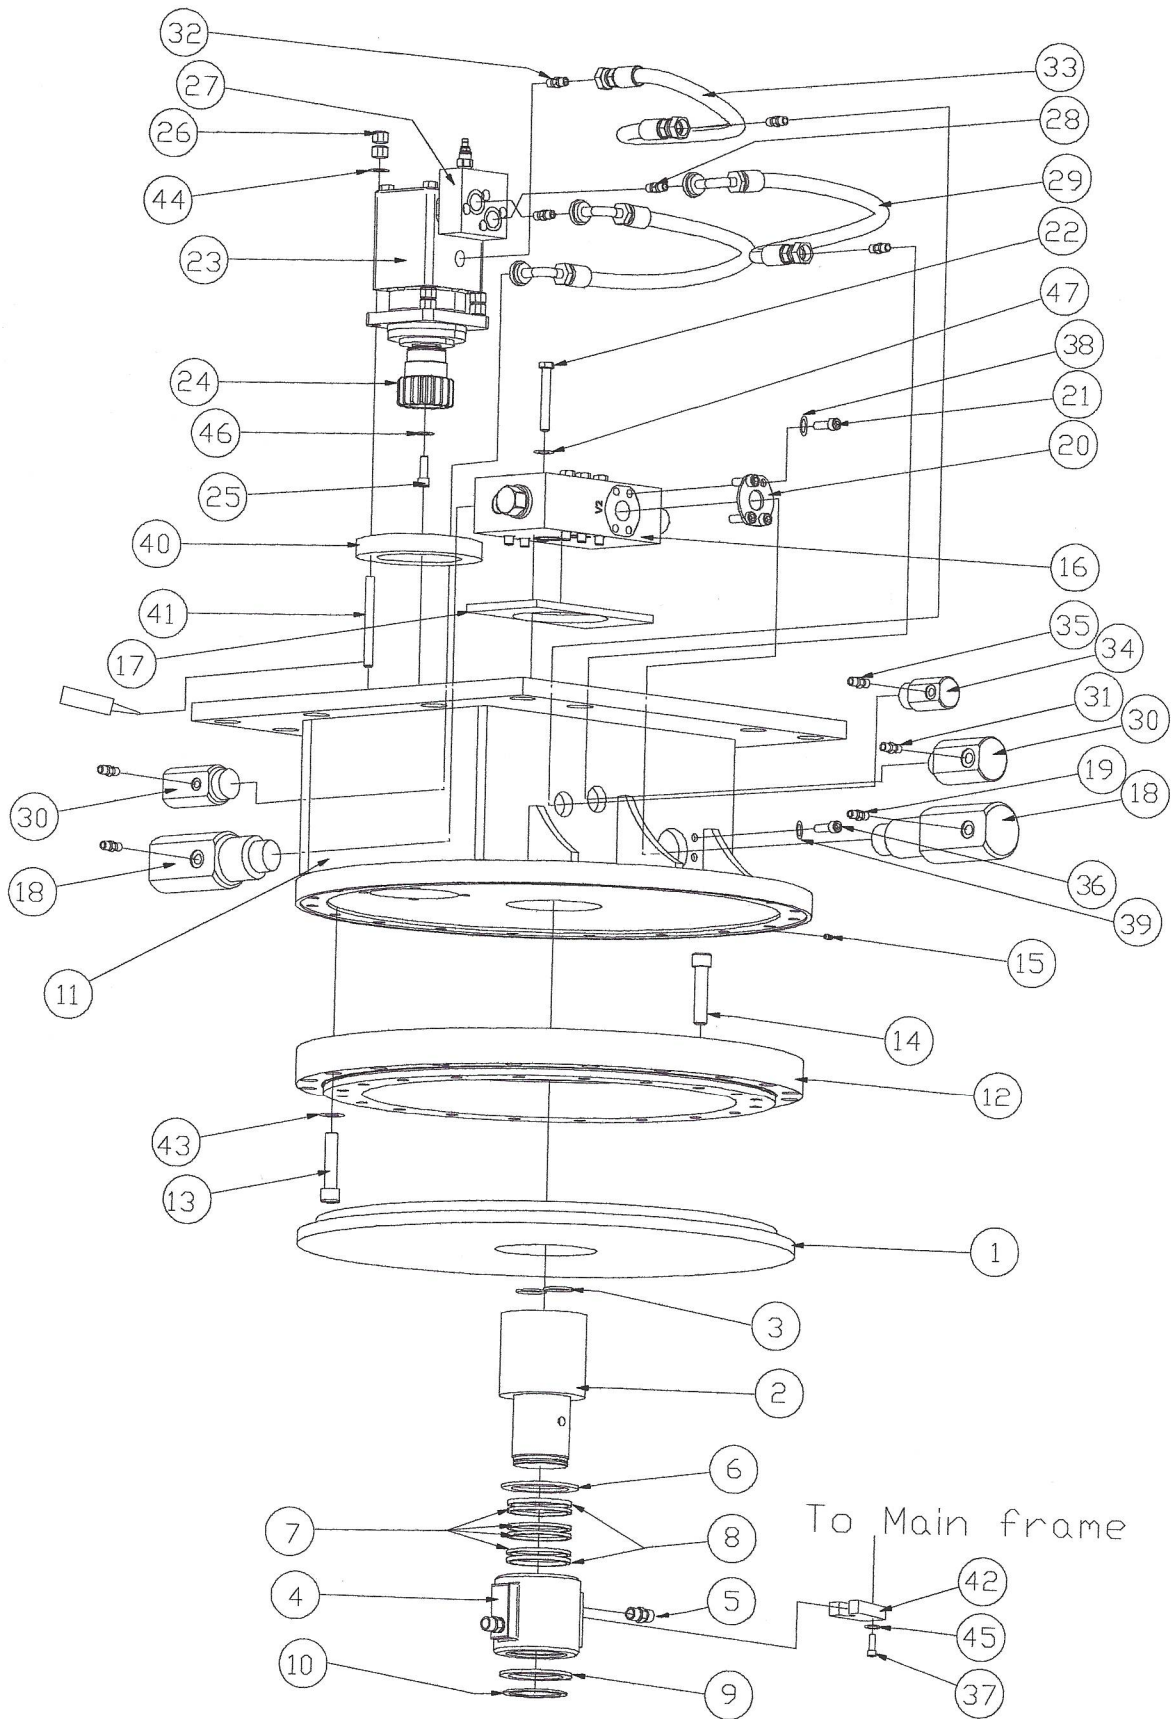


URC132RR ROTATOR ASSEMBLY

1/2

PART LIST				
ITEM	PART NAME	PART NO	SPEC	QTY
1	MAIN BODY UPPER PLATE	UR132-R001		1
2	JOINT SHAFT	UR132-R002		1
3	JOINT SHAFT O-RING	UR132-R003	BP47	2
4	JOINT CYLINDER	UR132-R004		1
5	JOINT NIPPLE	UR132-R005	PT1" x#1004	2
6	JOINT SHAFT UPPER COLLER	UR132-R006		1
7	JOINT SEAL KIT	UR132-R007	MSB90	1kit
8	JOINT O-RING	UR132-R008	BP90	2
9	JOINT SHAFT BOTTOM COLLAR	UR132-R009		1
10	SNAP-RING	UR132-R010	C85	1
11	BRACKET UPPER PLATE	UR132-R011		1
12	SWING BEARRING	UR132-R012	800x70	1
13	BOTTOM BOLT	UR132-R013	M20x90	40
14	UPPER BOLT	UR132-R014	HEX M20x90	40
15	GREASE NIPPLE	UR132-R015	1/8"	1
16	SPEED UP V/V	UR132-R016		1
17	SPEED UP V/V BASE	UR132-R017		1
18	MAIN HOSE HOLDER	UR132-R018		2
19	MAIN HOSE NIPPLE	UR132-R019	1" x #4	1
20	HOSE FRANGE	UR132-R020		2
21	HOSE FRANGE BOLT	UR132-R021	M10x35L	8
22	SPEED UP V/V BOLT	UR132-R022	M16-120L	7
23	HYDRAULIC MOTOR	UR132-R023	DMT-500	1
24	PINION GEAR	UR132-R024		1
25	PINION GEAR LOCK BOLT	UR132-R025	M12z30L	1
26	NUT	UR132-R026	M14	8
27	BRAKE VALVE	UR132-R027		1
28	BRAKE VALVE NIPPLE	UR132-R028	1/2"	2
29	MOTOR LINE HOSE	UR132-R029	1/2"	2


URC132RR ARM BODY ASSEMBLE

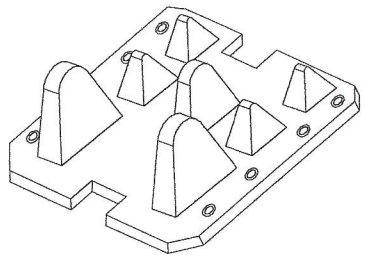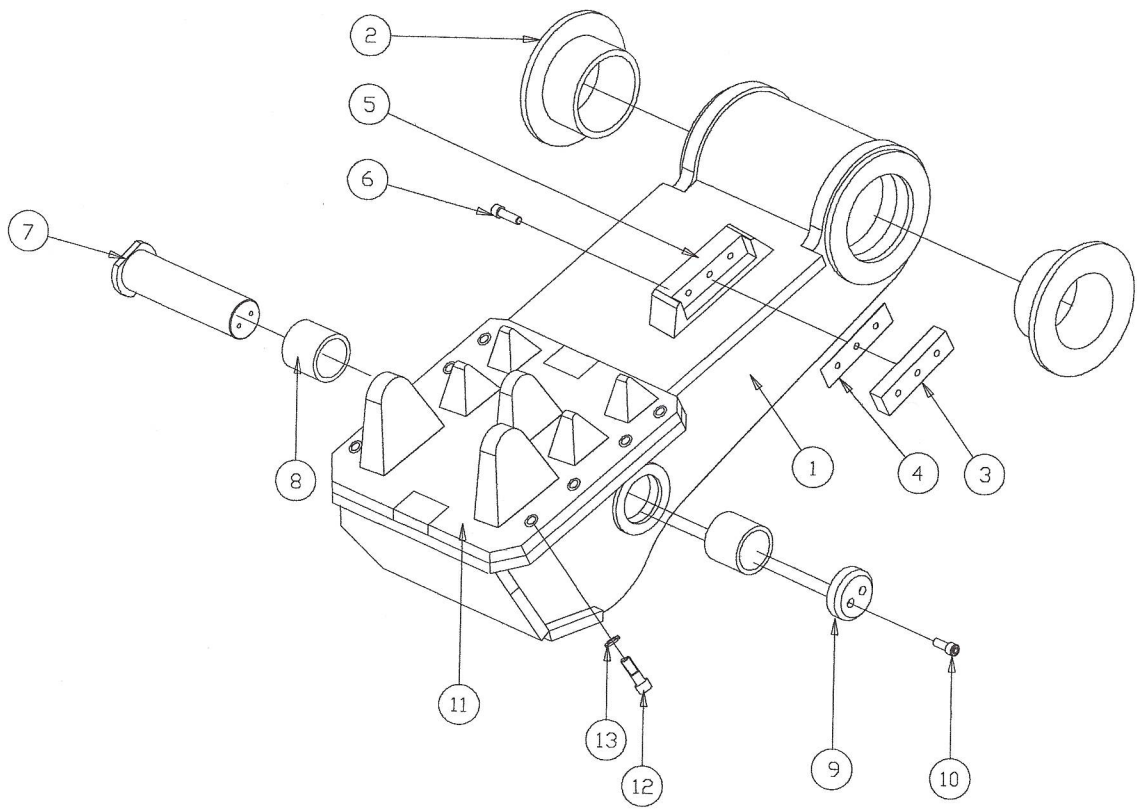

URC132RR ARM BODY

PART LIST				
ITEM	PART NAME	PART NO	SPEC	QTY
1	ARM BODY	UR132-A001		1
2	ARM MAIN BUSH	UR132-A002		2
3	BLADE	UR132-A003		1
4	BLADE SHIM	UR132-A004		1
5	BLADE HOUSING	UR132-A005		1
6	" BOLT	UR132-A006	M14x50L	3
7	ARM PIN	UR132-A007		1
8	ARM SIDE BUSH	UR132-A008		2
9	ARM PIN CAP	UR132-A009		1
10	" BOLT	UR132-A010	M12x35L	2
11	BOLT ON TOOTH PLATE	UR132-A011		1
12	BOLT ON TOOTH PLATE BOLT	UR132-A012	M30x70L	8
13	" WASHER	UR132-A013		8
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				


CYLINDER ASSEMBLY

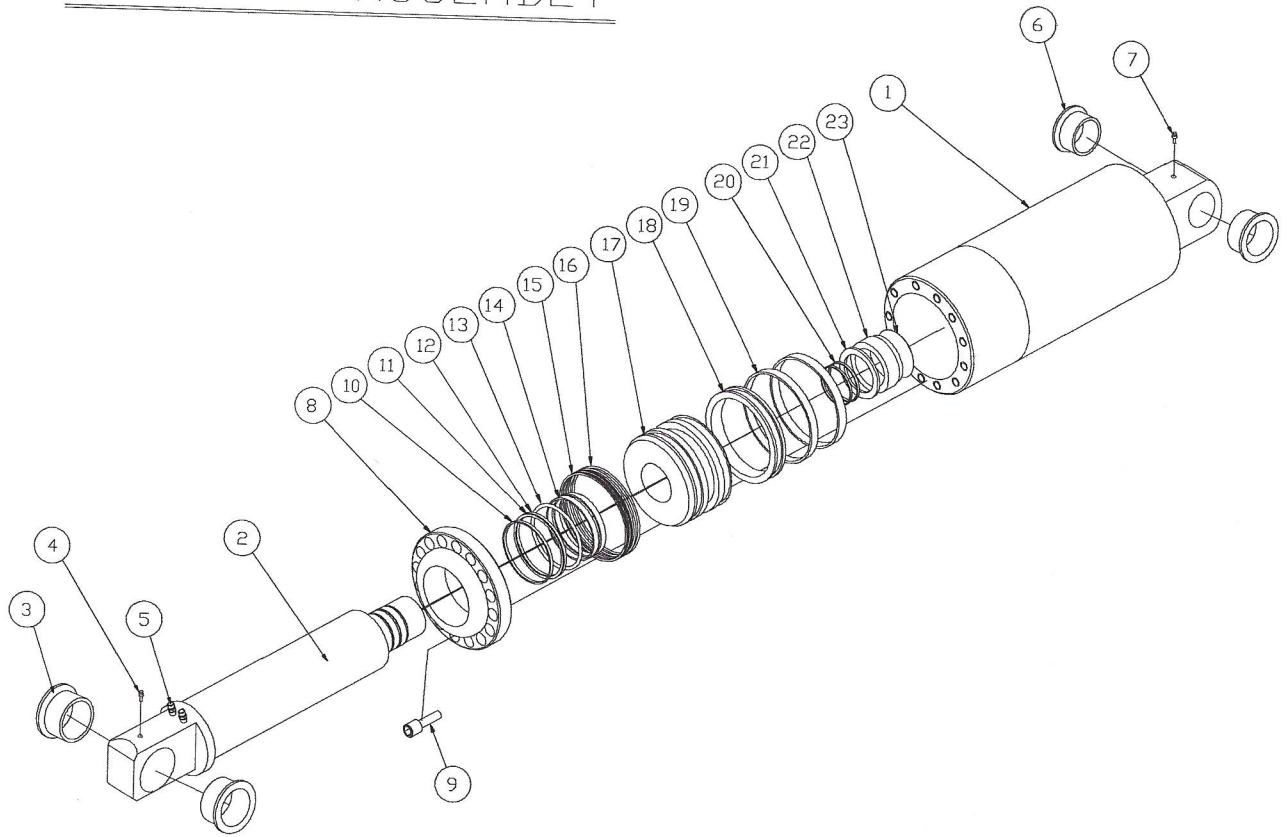

PART LIST

ITEM	PART NAME	PART NO	SPEC	QTY
1	CYLINDER TUBE	UR132-C001		1
2	ROD	UR132-C002		1
3	ROD BUSH	UR132-C003		2
4	GREASE NIPPLE	UR132-C004	PT 1/8"	1
5	LINE NIPPLE	UR132-C005	1"x#1004	2
6	CYLINDER HOLDER BUSH	UR132-C006		2
7	GREASE NIPPLE	UR132-C007	PT 1/8"	1
8	CYLINDER CAP	UR132-C008		1
9	CYLINDER CAP BOLT	UR132-C009	M20x55L	18
10	DUST SEAL	UR132-C010	180X193x7	1
11	ROD SEAL BACKUP RING	UR132-C011	180x200x3	1
12	ROD SEAL	UR132-C012	180x200x12	1
13	ROD SEAL	UR132-C013	180x195x8.1	1
14	ROD WEAR RING	UR132-C014	180x188x25	2
15	CYLINDER CAP O-RING B/R	UR132-C015	BG210	2
16	CYLINDER CAP O-RING	UR132-C016	210x220x1.9	2

CYLINDER ASSEMBLY

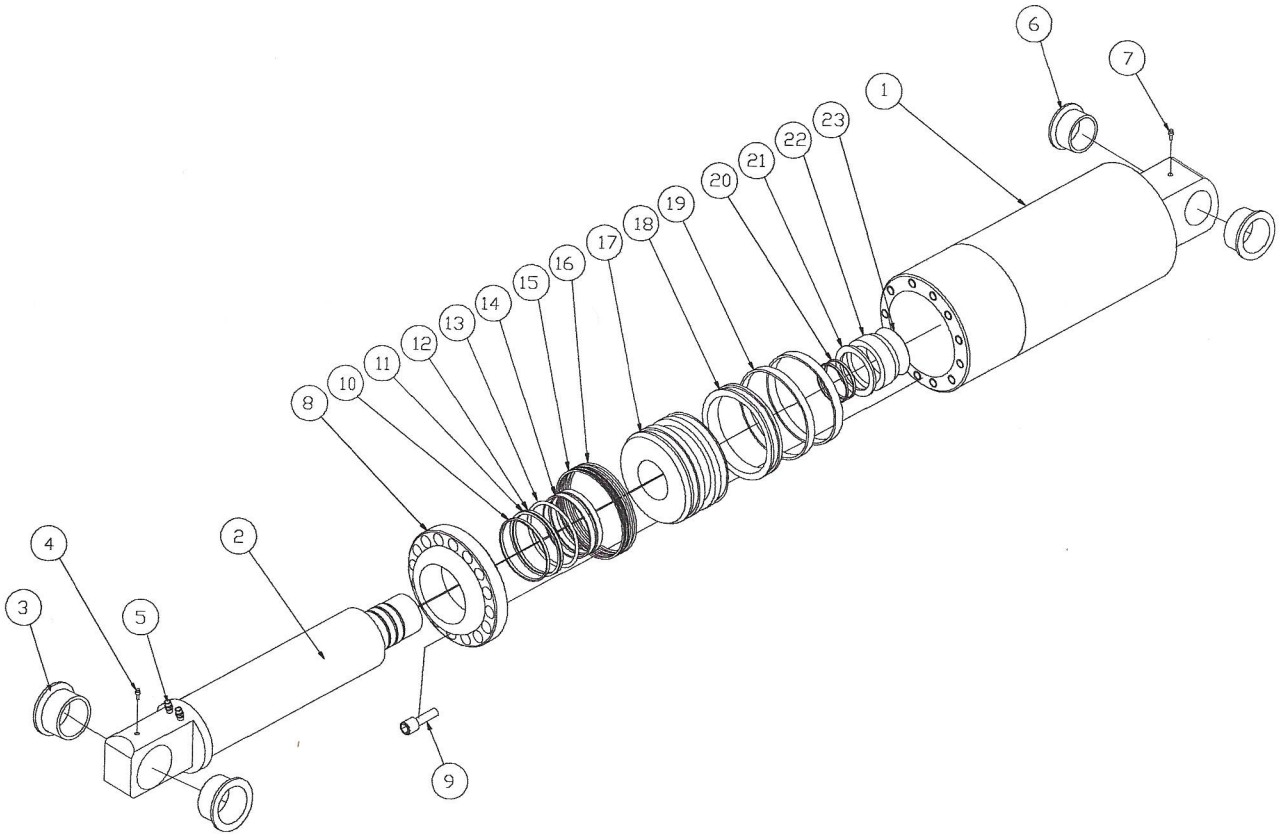

PART LIST				
ITEM	PART NAME	PART NO	SPEC	QTY
17	PISTON	UR132-C017		1
18	PISTON SEAL	UR132-C018	SPGW230	1
19	PISTON WEAR RING	UR132-C019	222x230x25	2
20	ROD O-RING	UR132-C020	220x230x5	1
21	PISTON COLLAR	UR132-C021		1
22	PISTON NUT	UR132-C022		1
23	LOCK KEY	UR132-C023		1