


1.1 MAIN BODY ASSEMBLY


Model : UB-305

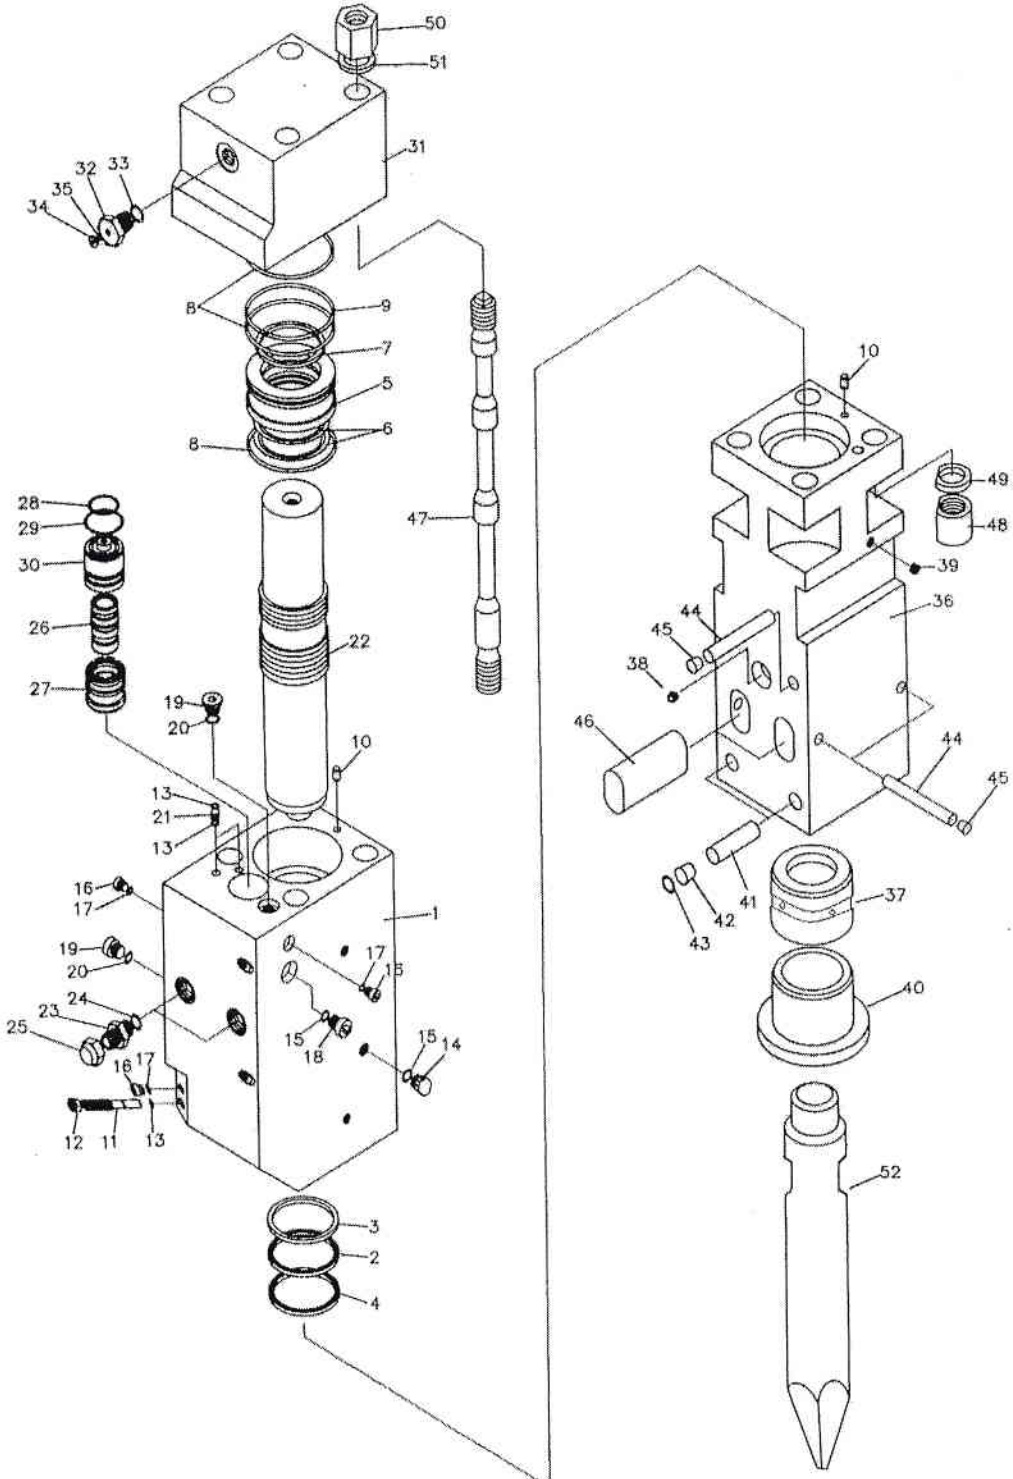

NO	Part No.	Part name	Q'ty	Remarks
	305CY0100	Cylinder ass'y	1	
1	305CY0101	Cylinder	1	
2	305CY0102	U-packing	1	ISI 80 * 90 * 6
3	305CY0103	Buffer ring	1	HBV 80 * 95.5 * 6
4	305CY0104	Dust real	1	DSI 80 * 90 * 6 * 8
5	305CY0105	Seal retainer	1	
6	305CY0106	Slide-packing	2	HBT 78 * 93.5 * 5.9
7	305CY0107	Seal-ring	1	Q 78
8	305CY0108	O-ring	3	1BC105
10	305CY0110	Knock pin	2	
11	305CY0111	Cylinder adjuster	1	
12	305CY0112	Adjuster nut	1	
13	305CY0113	O-ring	5	1BP 6
14	305CY0114	Air plug	1	
15	305CY0115	O-ring	1	1BP 14
16	305CY0116	1/4" Socket plug	6	
17	305CY0117	O-ring	6	1BP 11
19	305CY0119	M24 Socket plug	2	
20	305CY0120	O-ring	2	1BP 22
21	305CY0121	Teflon plug	2	φ 9 * 12.7
22	305CY0122	Piston	1	
23	305CY0123	Adapter	2	
24	305CY0124	O-ring	2	1BP 24
25	305CY0125	Union cap	2	
	305VV0200	Valve ass'y	1	
26	305VV0201	Valve	1	
27	305VV0202	Sleeve	1	
28	305VV0203	O-ring	1	1BC 40
29	305VV0204	O-ring	1	1BC 55
30	305VV0205	Valve cover	1	
	305BH0300	Back head ass'y	1	
31	305BH0301	Back head	1	
32	305BH0302	B/h charging valve	1	
33	305BH0303	O-ring	1	1BP 18

NO	Part No.	Part name	Q'ty	Remarks
34	305BH0304	Charging valve cap	1	
35	305BH0305	O-ring	1	1BP 6
	305FH0400	Front head ass'y	1	
36	305FH0401	Front head	1	
37	305FH0402	Thrust bush	1	
38	305FH0403	Grease nipple	2	
39	305FH0404	Hollow plug	1	
40	305FH0405	Front cover	1	
41	305FH0406	Front cover pin	2	φ 20 * L110
42	305FH0407	Rubber plug	2	φ 20
43	305FH0408	Snap ring	2	
44	305FH0409	Stop pin	3	φ 18 * L145
45	305FH0410	Rubber plug	3	φ 18
46	305FH0411	Rod pin	2	
	305TB0500	Through bolt ass'y	4	
47	305TB0501	Through bolt	4	
48	305TB0502	Through bolt nut	4	
49	305TB0503	Through bolt washer A	4	
50	305TB0504	Hexagonal nut	4	
51	305TB0505	Through bolt washer B	4	
52	305RR0600	Rod (w)	1	
	305RR0601	Rod (F)		
	305RR0602	Rod (M)		
	305RR0603	Rod (C)		
	305SL0000	Seal kit	1	
	305TL0000	Tool set	1	
	GC00000	GAS CHARGING KIT	1	
	GS00001	Sticker 2 (GREESE)	1	

2.1 BOX TYPE BRACKET

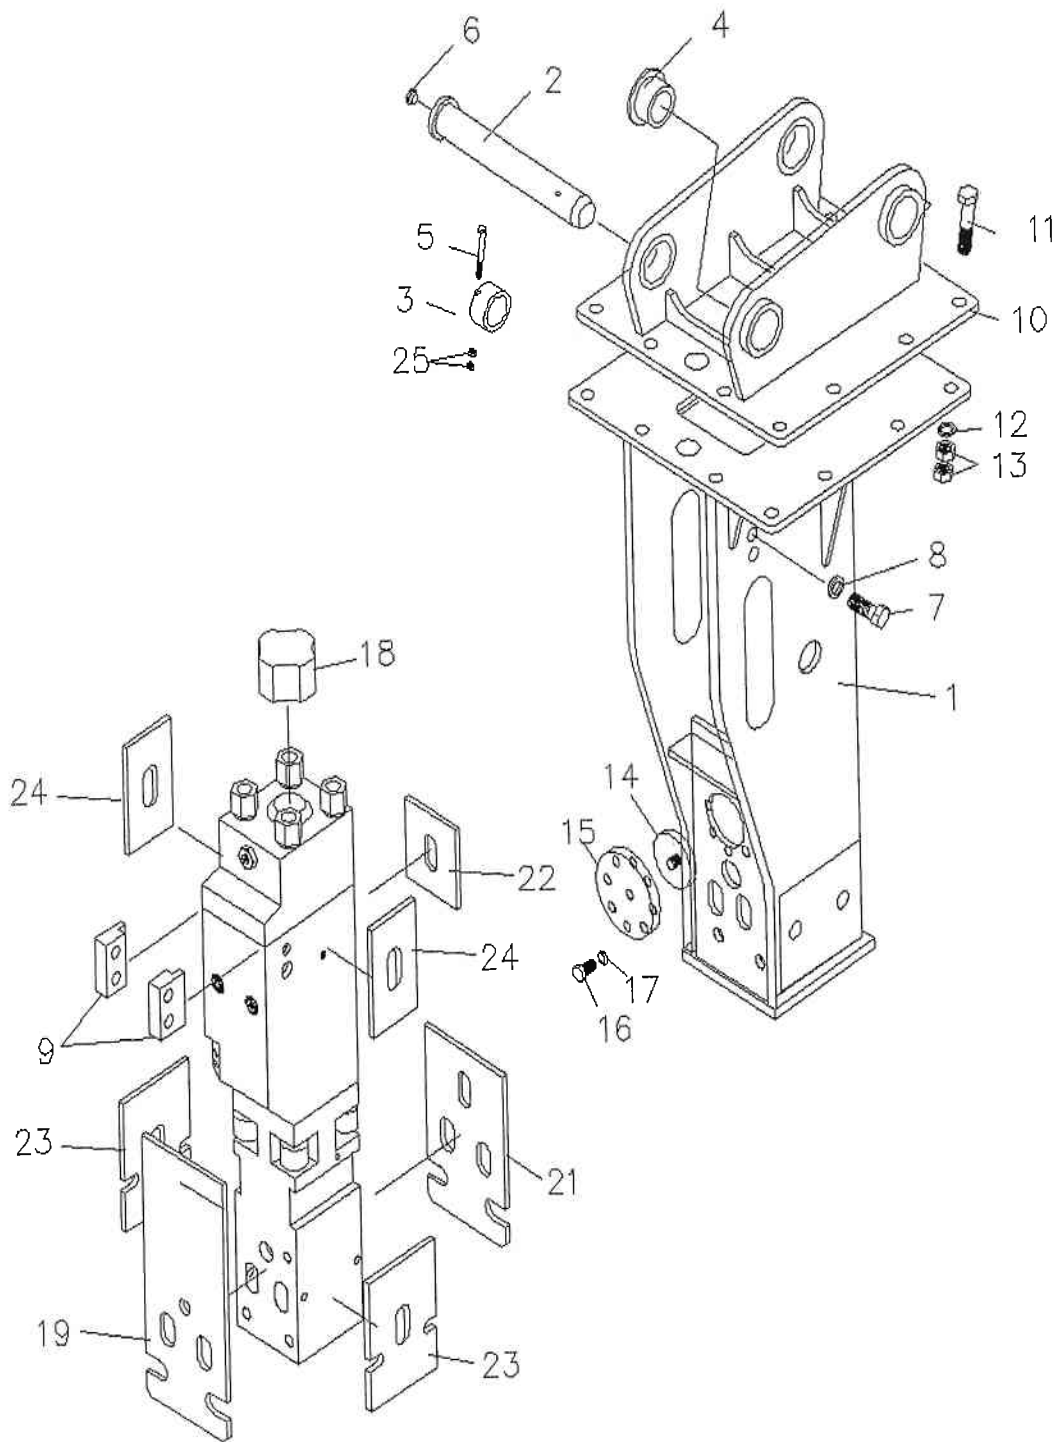

No.	Part No.	Part Name	Q'ty	Remarks
	305BC0000	Bracket assy	1	
1	305BC0001	Bracket, main	1	
2	305BC0002	Bracket, pin	2	
3	305BC0003	Bracket stop ring	2	
4	305BC0004	Bracket bush	4	
5	305BC0005	Stopping bolt	2	
6	305BC0006	Grease nipple	2	
7	305BC0007	Spacer bolt	4	M20 * P2.5 * L40
8	305BC0008	Spring washer	4	5.1t
9	305BC0009	Spacer	2	
10	305BC0010	Mounting cap	1	
11	305BC0011	Mounting cap bolt	12	M20 * P2.5 * L80
12	305BC0012	Spring washer	12	5.1t
13	305BC0013	Mounting cap nut	24	M20 * P2.5 * 16t
14	305BC0014	Damper	1	
15	305BC0015	Damper cover	1	
16	305BC0016	Damper cover bolt	8	M16 * P2 * L40
17	305BC0017	Spring washer	8	4t
18	305BC0018	Top damper	1	
19	305BC0019	Front damper	1	
21	305BC0021	Rear damper(1)	1	
22	305BC0022	Rear damper(2)	1	
23	305BC0023	Side damper(1)	2	
24	305BC0024	Side damper(2)	2	
25	305BC0025	Stopping nut	4	